 


 
## INSTALLATION INSTRUCTIONS FOR ADVANTEX / VALUE SERIES RIM ES PRODUCT

### Rim ES - Electric Signal

Dwg #: 101379 Advantex (SS)  
 104600 Advantex (AL)  
 101800 Value Series

 
# ADVANTEx® & VALUE SERIES®

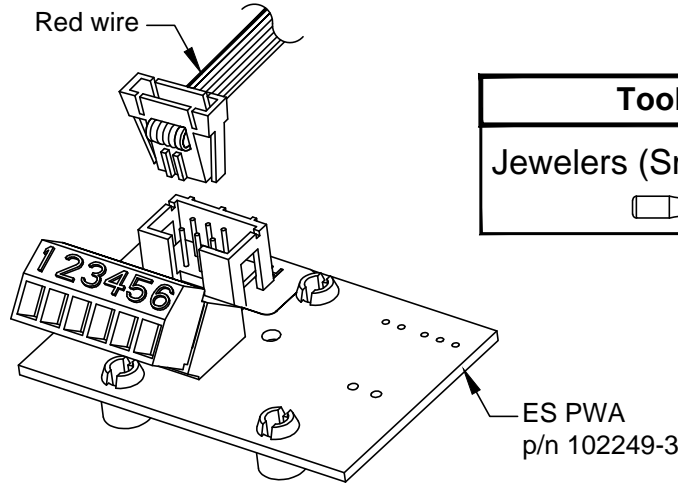

Tools Required
Jewelers (Small) Screwdriver


Advantex/Value Series product consists of two switches:

- 1) PushPad/LBM (Latch Bolt Monitor) monitors the pushpad and the deadlocking actuator in the latchbolt. PushPad/LBM Switch \*Normally Open held closed (Door Secure).
- 2) Authorized (Auth) Access Switch is activated by operating outside trim.

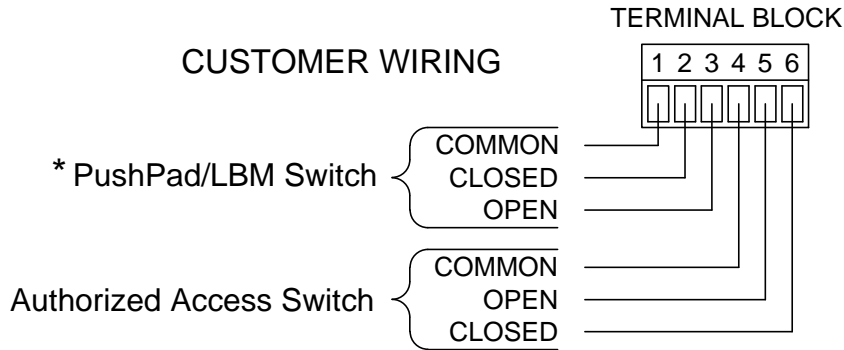

### Theory of Operation:

- Door Closed - Deadlocking actuator activates PushPad/LBM Switch. Authorized Access Switch is not affected.
- Door Closed - Depressing the PushPad changes the state of the PushPad/LBM Switch. Authorized Access Switch is not affected.
- Door Closed - Authorized Access Switch is activated by operating outside trim. As the latchbolt begins to retract, the PushPad/LBM Switch is also activated.

For WARRANTY information,  
 scan code or go to  
[www.detex.com/warranty](http://www.detex.com/warranty)

For device installation videos,  
 scan code or go to  
[www.detex.com/videos](http://www.detex.com/videos)



Should you have a Question/Problem with your Detex device please call Detex Technical Support from the job site at 1-800-729-3839 and choose option 2 on our menu. Please do not return the product to the distributor.

**Owner's Copy**

