

- NOTES:**
1. DIMENSIONS SHOWN IN INCHES AND [mm].
 2. 5/8" STOP SHOWN.
 3. 12 GAGE REINFORCEMENT PLATE INSIDE DOOR IS RECOMMENDED AT DEVICE MOUNTING LOCATION.
 4. DRILL PILOT HOLES STRAIGHT & LEVEL THROUGH DOOR AT LOCATIONS "E" & "G".

HDG. _____ DR. _____

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames regardless of the type, material or method of construction.



TEMPLATE METAL DOOR
ECL-600, RHR
WITH ECL-620 TRIM

DETEX CORPORATION


DO NOT SCALE DRAWING

DATE 6-23-17 TEMPLATE NUMBER T2112 page 1 of 2

OUTSIDE TEMPLATE

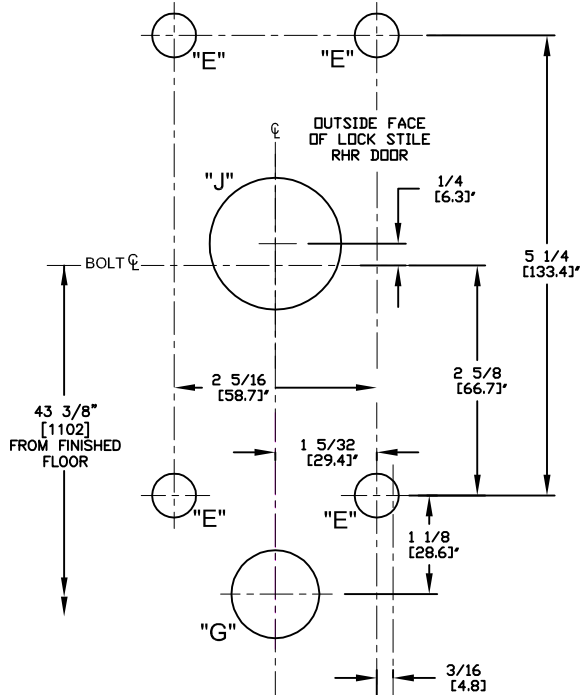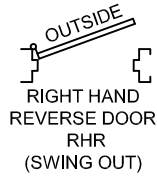

"E" = 1/2" DRILL
"G" = 1" DRILL
"J" = 1-1/2" DRILL

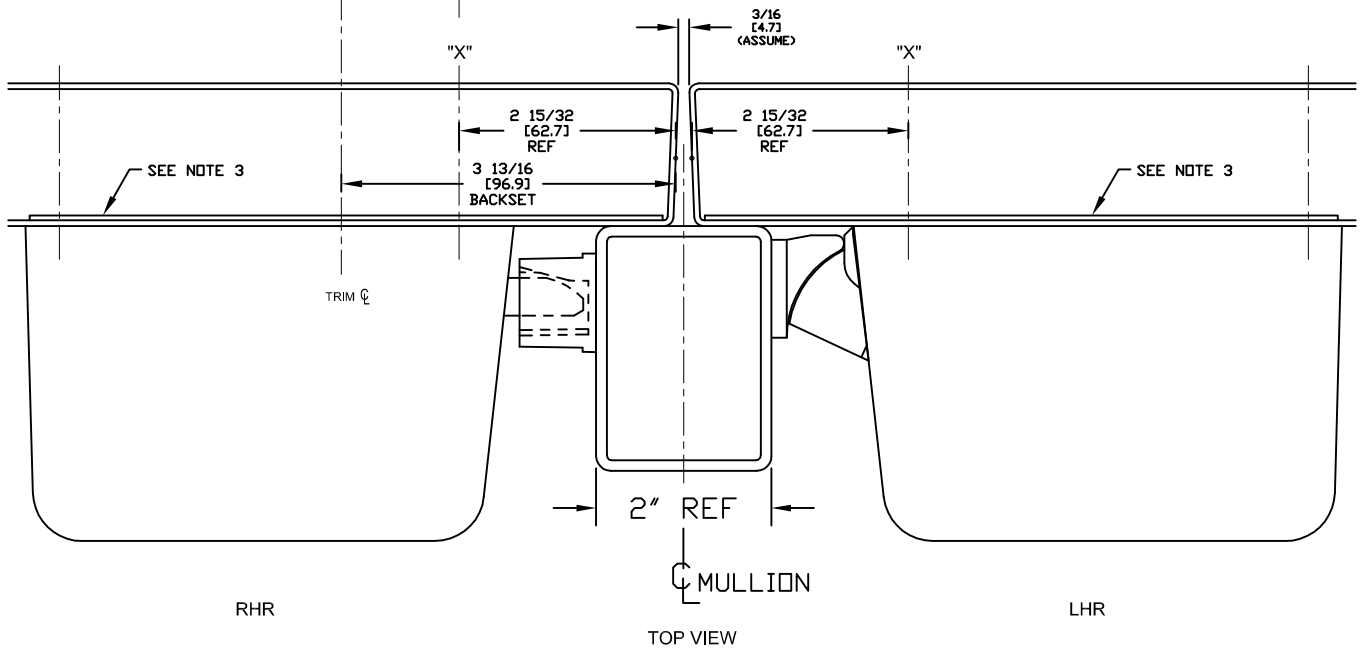

HDG. _____ DR. _____

RESPONSIBILITY

Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames regardless of the type, material or method of construction.

TEMPLATE
METAL DOOR
ECL-600, RHR
WITH ECL-620 TRIM

DETEX
CORPORATION

DO NOT SCALE DRAWING

DATE 6-23-17

TEMPLATE NUMBER

T2112 page 2 of 2