


Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130
(830)629-2900 /1-800-729-3839 /FAX(830)620-6711
E-MAIL: detex@detex.com INTERNET: www.detex.com

INSTALLATION INSTRUCTIONS FOR MORTISE 03CM TRIM

MORTISE

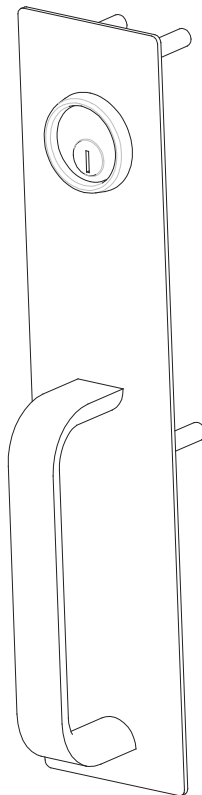







CM TRIM INSTRUCTIONS

NOTE: 1) Mortise lock NOT supplied with TRIM device.

2) For a retrofit application, remove existing lock and device before installing new trim.


3) LHR installation shown (Reverse all steps for RHR).

STEPS 1: PREP DOOR



Machine Screws				Sheet Metal / Wood Screw
A	I	L	M	N
#1/4-20 x 1"	#12-24 x 1/2"	#1/4-20 x 1/2"	#1/4-20 x 2-3/4"	#1/4-20 x 2-1/4"
				
				J
				#12 x 1"
				

1 TRIM side: Use plastic template to mark and drill TRIM holes

MARK HOLES

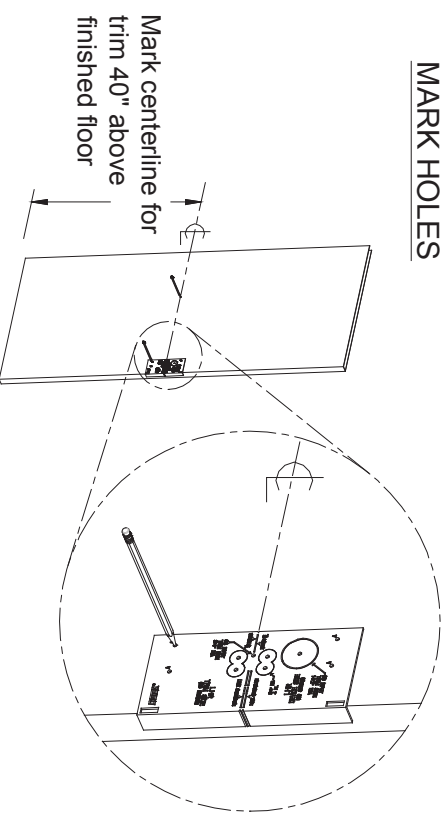

DRILL HOLES

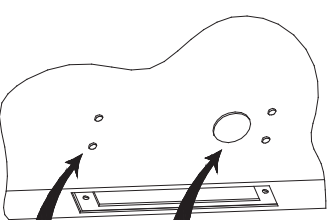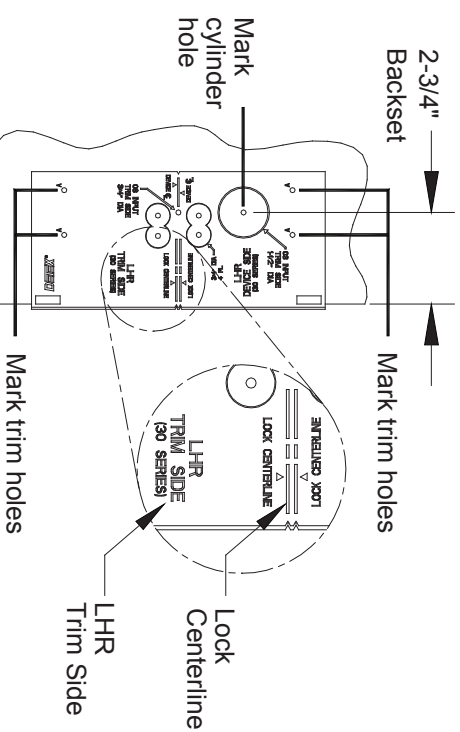


Lock washer

#1/4 Lock washer




STEPS 2-5: INSTALL TRIM DEVICE AND MORTISE LOCK

2 Mark and drill bottom hole for thru bolt

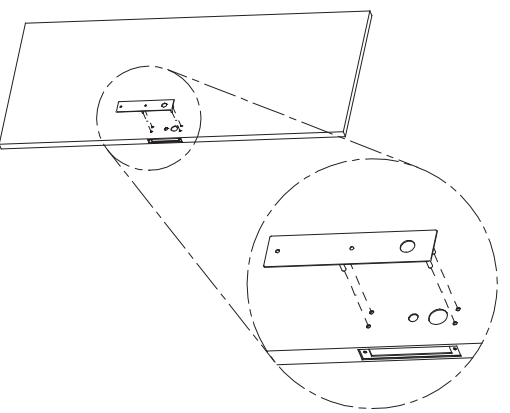


Drill 3/8" diameter (1/2" max) hole thru door

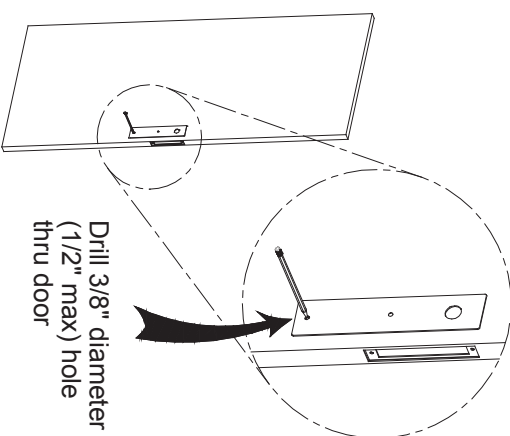


3 Install TRIM device

Assemble pull to trim plate with "L" screw provided

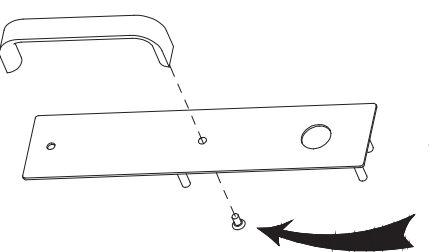


#1/4 Lockwashers

Install backplate with (4) "A" screws.

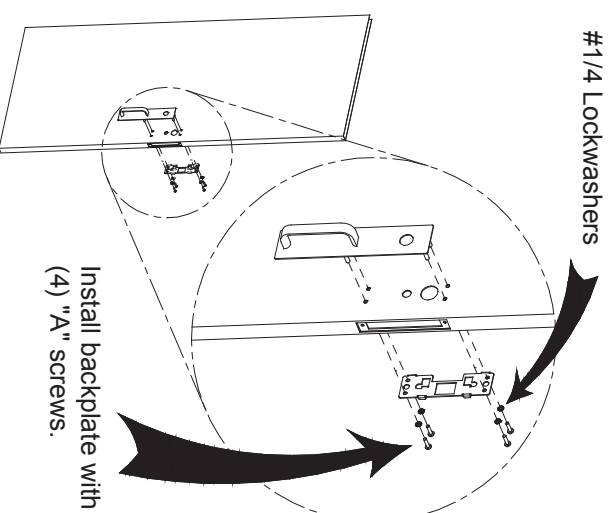


Fasten bottom of pull with "M" or "N" screw and washer provided

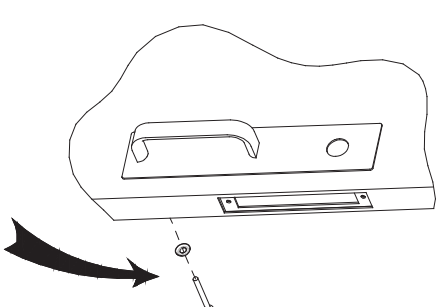

4 Install MORTISE lock

Install lock with (2) "I" screws or (2) "J" screws for wood doors. Fasten screws loosely. (See step 6)

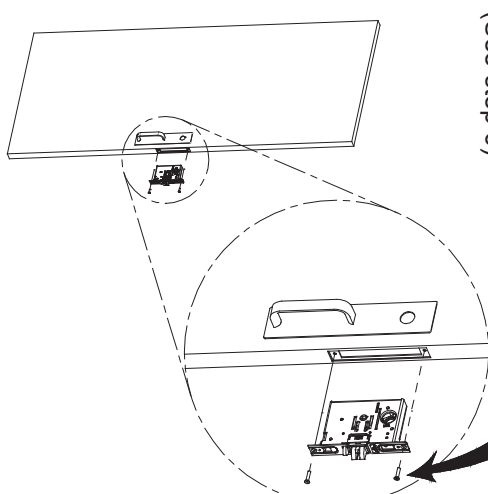


IMPORTANT!

For modular cable devices, see electrical instructions for cable routing.

STEPS 2-5: (CONTINUATION)

5


Install mortise cylinder

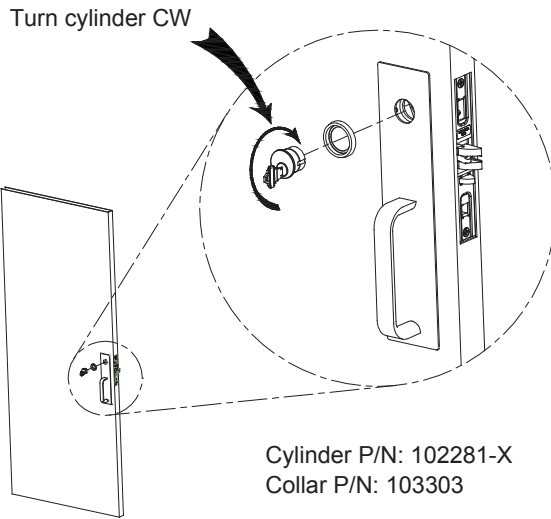

Note:
Mortise cylinder and collar NOT supplied with trim, but
can be ordered separately.

SECURE CYLINDER

Tighten screws
(Reference Step 4)

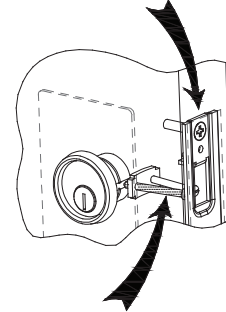

Tighten screw nearest
trim side of door only

TRIM INSTALLATION COMPLETE

Continue installation using device
instructions (p/n: 101349)