
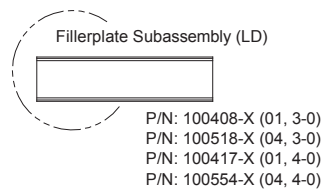
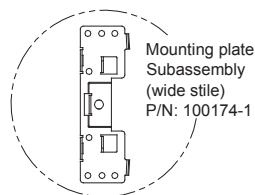
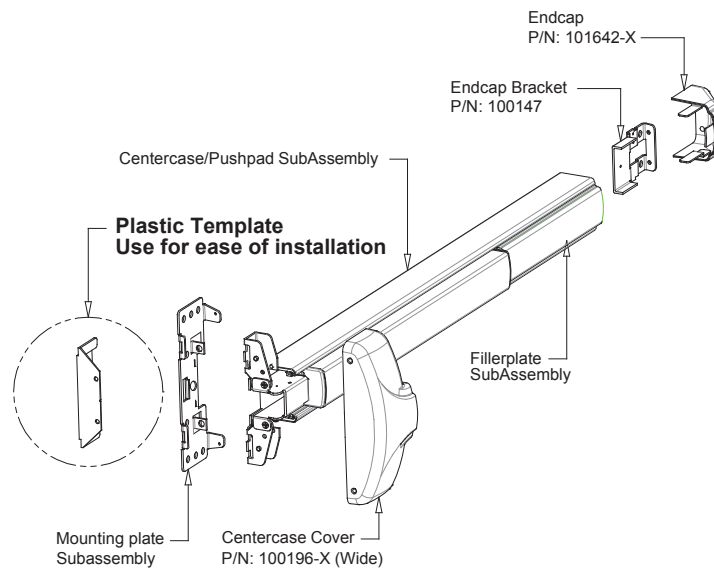



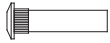


Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
(830)629-2900 / 1-800-729-3839 / Fax (830)620-6711
E-MAIL: detex@detex.com INTERNET: www.detex.com
INSTALLATION INSTRUCTIONS FOR DETEX ADVANTEX[®]
01/04 DUMMY PUSHBAR ASSEMBLY



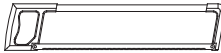
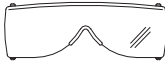
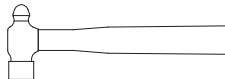




ADVANTEX[®] 01/04 Dummy Pushbar

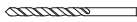



Owner's Copy

| Fastener Table | | | | | |
|---|----------------|------|---|---|--|
| DETEX [®] | | | Drill Bit | Tap Wrench | Comments |
| | | |  |  | Use Either Machine Screws, Sheetmetal Screws, or Sex Nuts |
| Machine Screws  | #1/4-20 x 1/4" | PPH | ---- | ---- | Used to Fasten Centercase Unit onto Mounting plate |
| | #1/4-20 x 1" | PPH | #7 or 13/64" | #1/4-20 Tap | Used on Strike, Mounting plate, and Endcap Mounting Holes |
| Self-drilling Screws  | #10 x 1" | PFH | NOT REQUIRED | ---- | Used on 99 Strike Center Mounting Hole |
| | #14 x 1" | PPH | NOT REQUIRED | ---- | Metal Applications Used on Strike, Mounting plate, and Endcap Mounting Holes |
| Sex Nut  | #1/4-20 | ---- | 9/32" Interior Door Face | ---- | Recommended on Fire Rated Wood and Unreinforced Hollow Metal Doors Used on Mounting plate and Endcap Mounting Holes |
| | | ---- | 3/8" Exterior Door Face | ---- | |

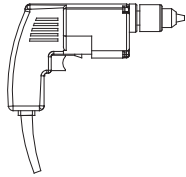Note: Fastener selection will vary per catalog configuration and kits ordered.
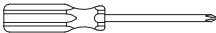
| Tools Required | |
|---|---|
| Power Drill  | Pencil  |
| | Hack Saw  |
| Safety Glasses  | Hammer  |
| Level  | Tape Measure  |
| Screw Driver  | Center Punch  |

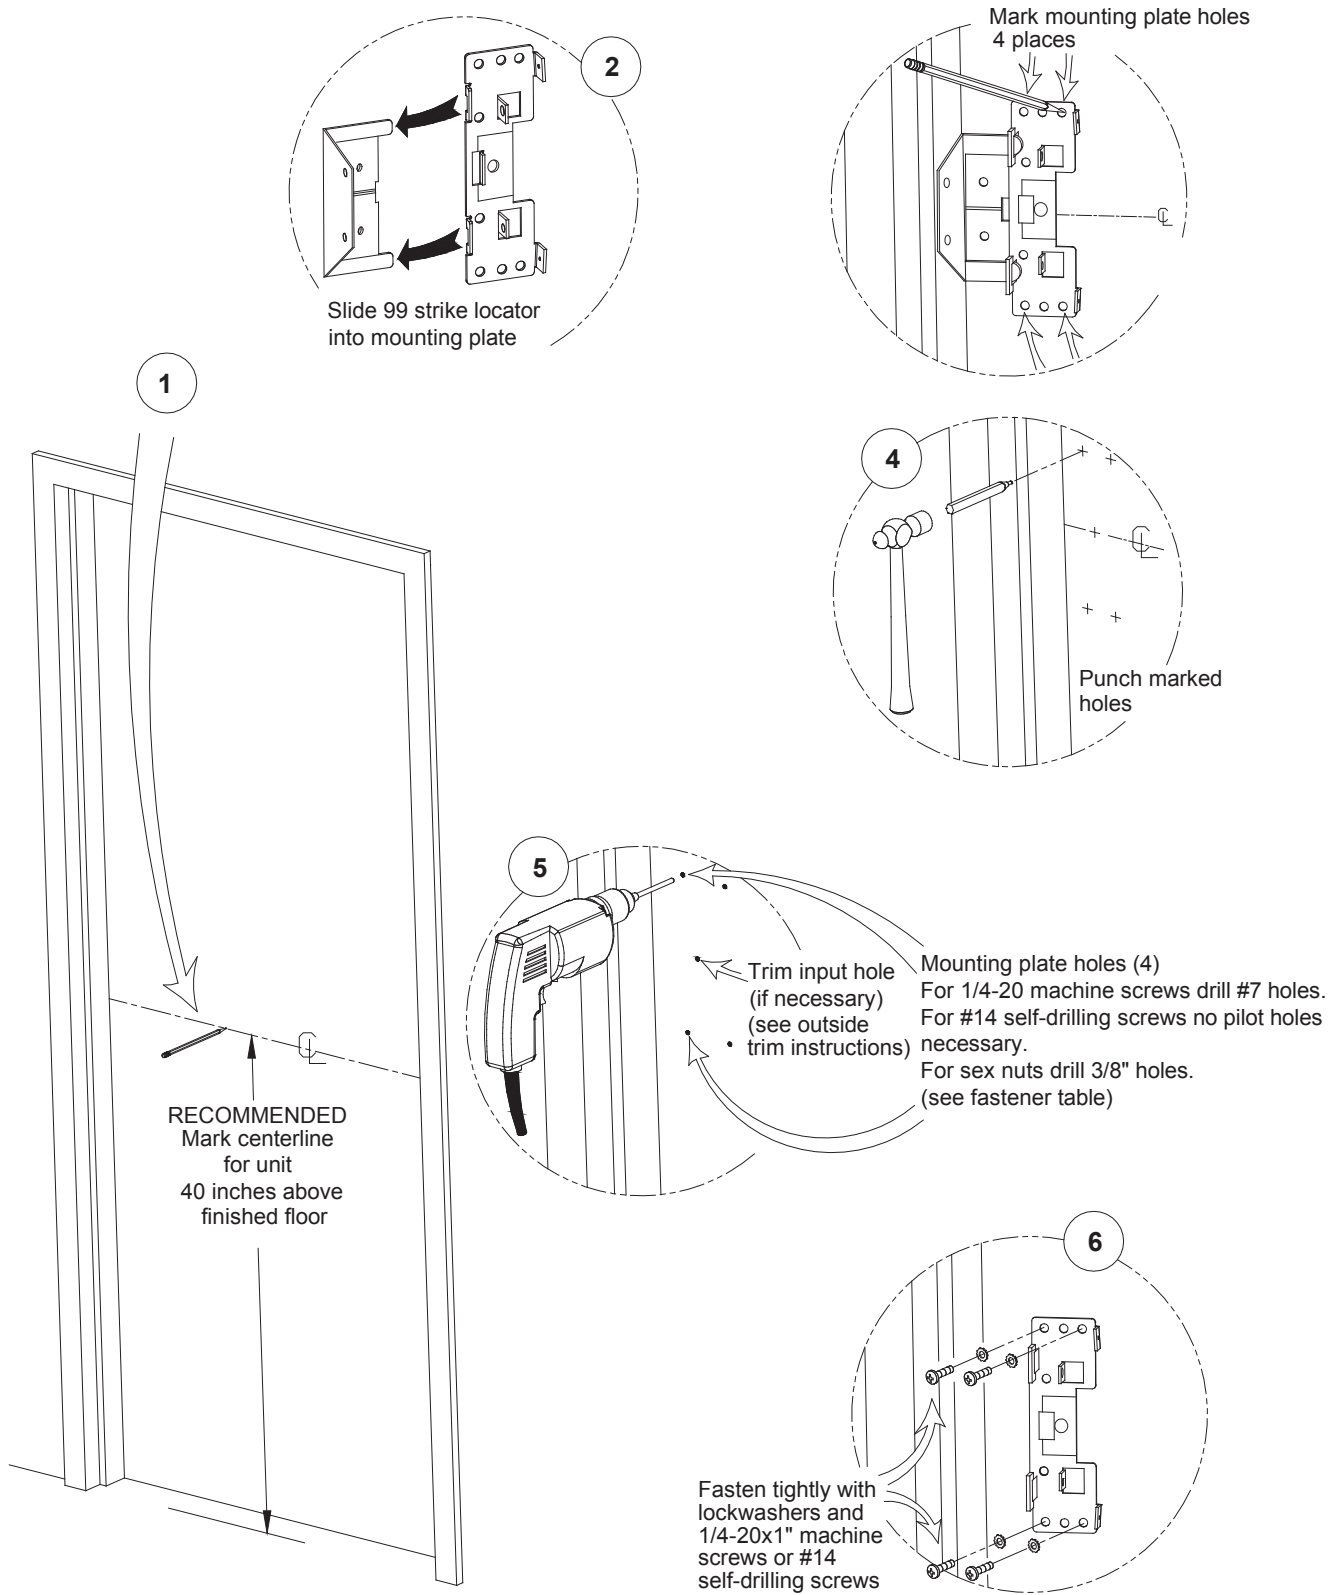

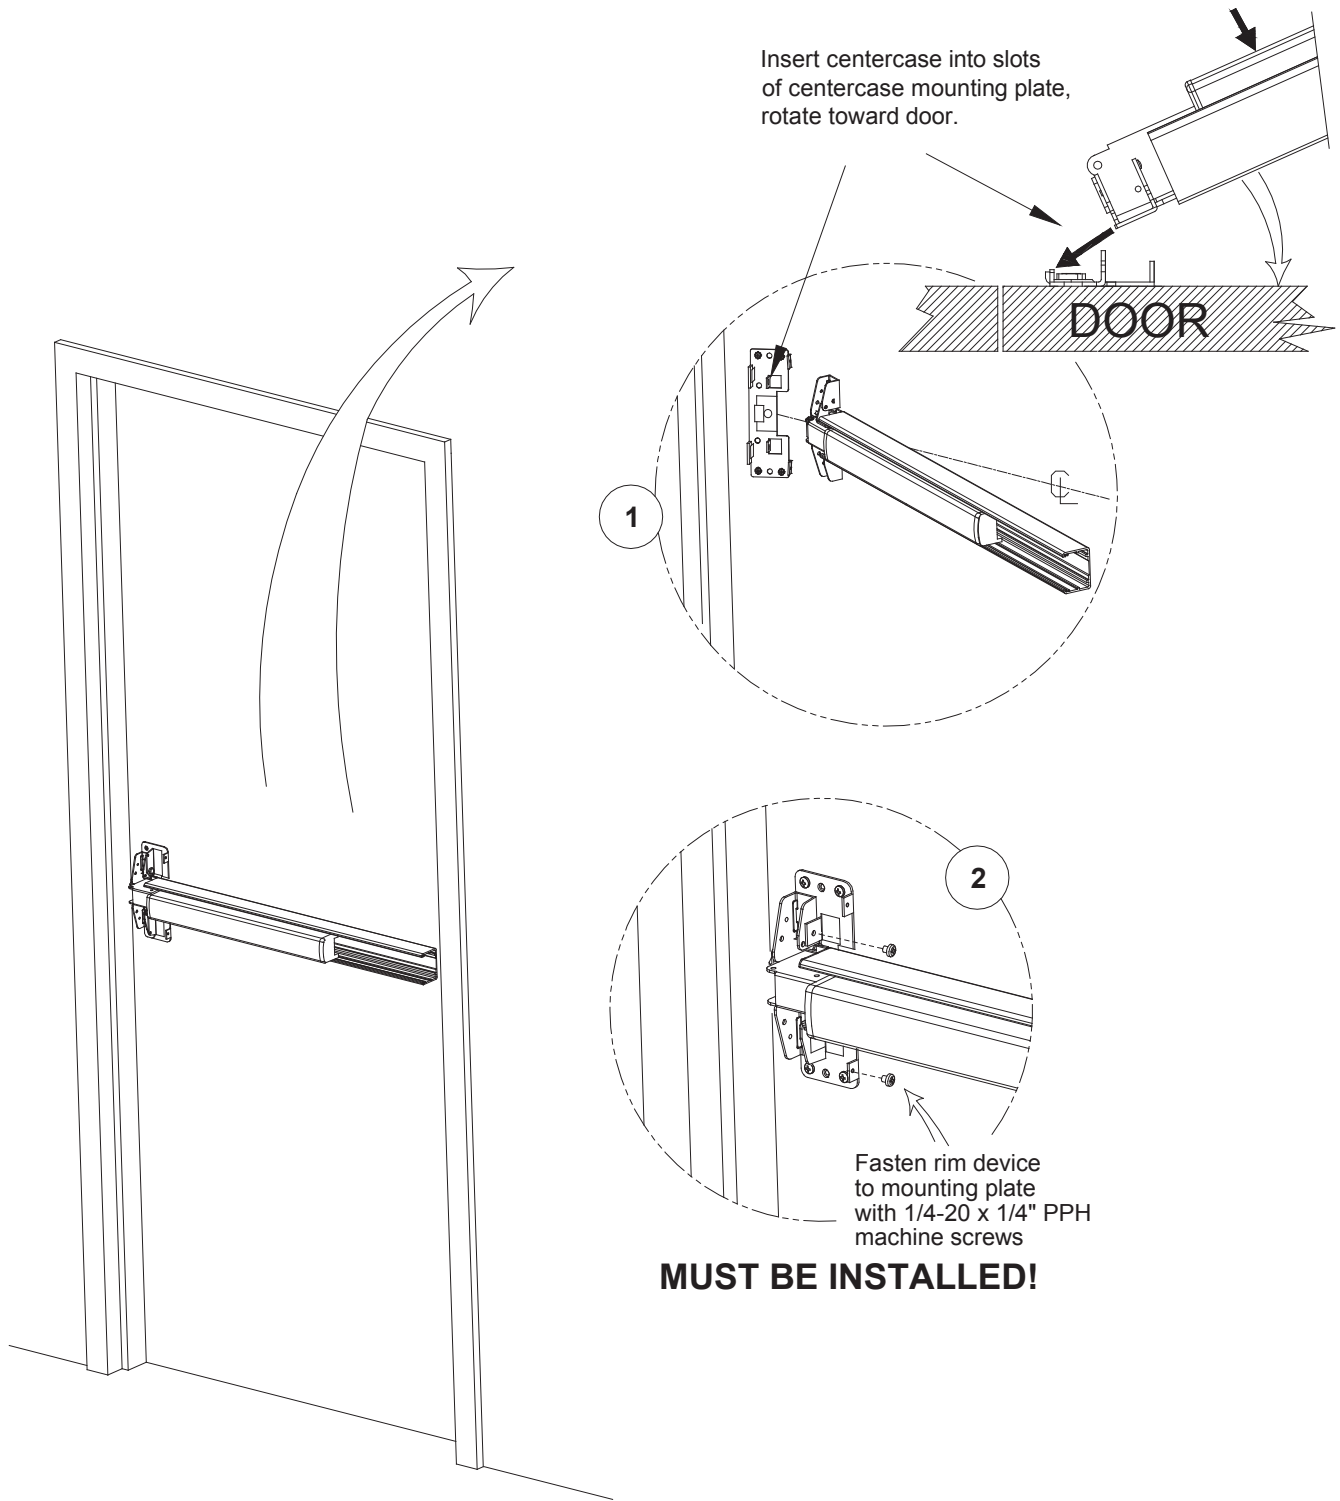

Insert centercase into slots of centercase mounting plate, rotate toward door.


DOOR

1

2


Fasten rim device to mounting plate with 1/4-20 x 1/4" PPH machine screws

MUST BE INSTALLED!

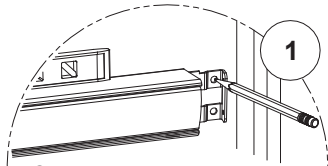


1
Slide endcap bracket into extrusion, level pushpad assembly, and mark (2) holes



Note: Endcap bracket must bottom-out on extrusion before marking holes.

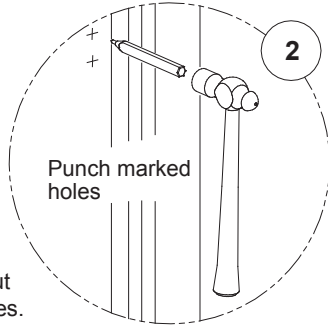


2
Punch marked holes

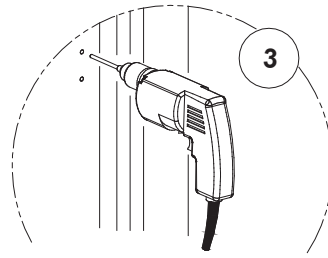

3
For 1/4-20 machine screws drill #7 holes.
For #14 self-drilling screws no pilot holes necessary.
For sex bolts drill 3/8" holes.

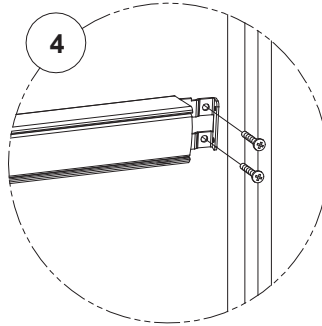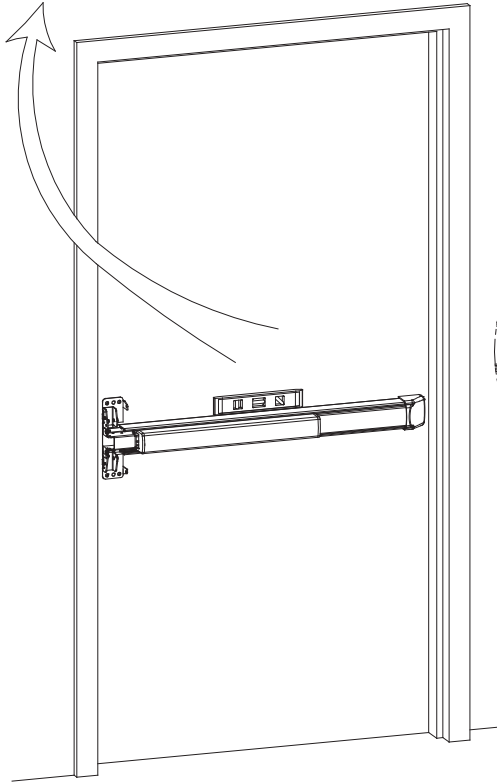


4

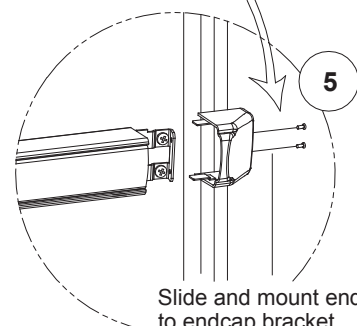

IMPORTANT:
Install (2) 10-32 FH Screws to attach Endcap

5
Slide and mount endcap to endcap bracket

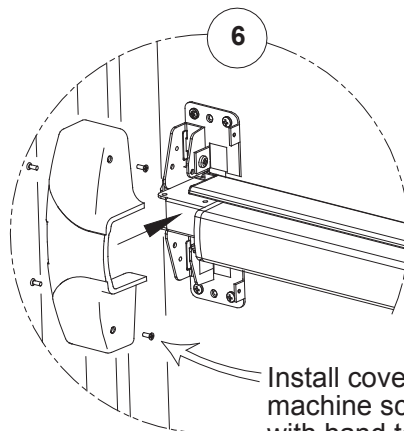

6

Install cover with 6-32 machine screws. Tighten with hand tools only.