

104957 November xx, 2021

А

Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045 830-629-2900 / 800-729-3839 / Fax 800-653-3839 / Text photos only: 830-481-6433 / INTERNET: www.detex.com

Installation instructions for DTX-LM-DATA module

Dwg # 106984

The DTX-LM-DATA module is required when an AO19 (single or twin) device is used in conjunction with a BEA safety sensor. It allows the BEA safety sensor to properly communicate door position with the UDC controller within an AO19 device.


AO19 **SINGLE** devices require one module for the UDC controller. AO19 **INDEPENDENT TWIN** devices require one module for **each** UDC controller. AO19 **DEPENDENT TWIN** devices require one module connected to the **primary** UDC controller.

Table of Contents	Page
Device parts breakdown view & part numbers	2
Wire connections to UDC controller & Safety Sensor	3
Mount the DTX-LM-DATA module to enclosure	3

Should you have a Question/Problem with your Detex device please call Detex Technical Support from job site at 1-800-729-3839 and choose option 2 on our menu. Please do not return the product to the distributor.

For WARRANTY information, scan code below or go to www.detex.com/warranty







For device installation videos, scan code below or go to www.detex.com/videos




104957 Page 1

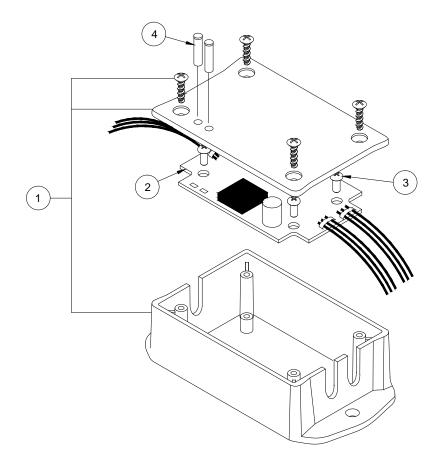

ITEM #	P/N	DESCRIPTION	QTY
1	106983	ENCLOSURE, D1 DATA SIGNAL	1
2	106982	PWA, D1 DATA SIGNAL	1
3	PP-5374-42	SCREW, PLASTITE, #4-20, 1/4" LONG	4
4	101850-23	LIGHT PIPE, .640 LONG	2

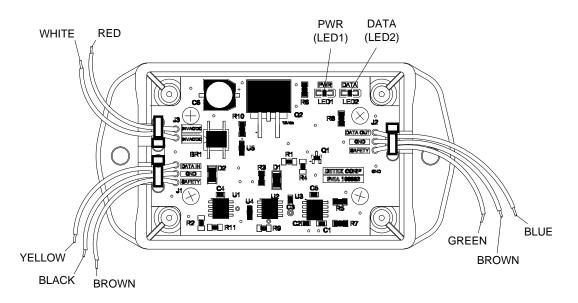

104957 Page 2

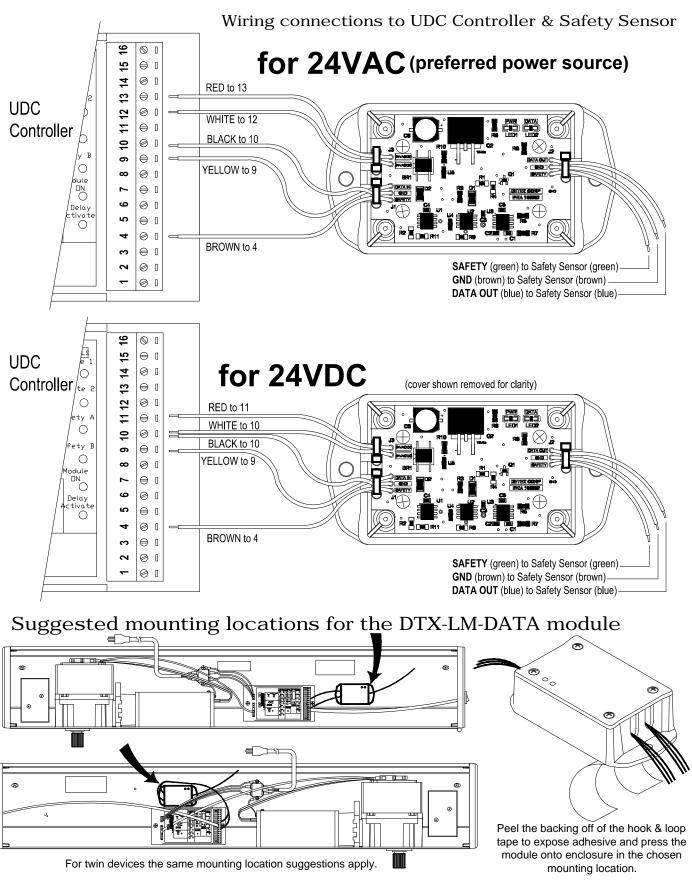

Ensure that wires will reach the UDC controller without binding before mounting the DTX-LM-DATA module. See above. Note: The DTX-LM-DATA module will be functional in any position or rotation.